


Configurador Scanner Magellan 9300I Puertos Serie y Balanza

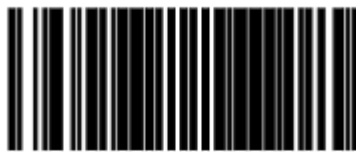

RETURN TO FACTORY SETTINGS



ENTER/EXIT PROGRAMMING MODE



1D Double Read Timeout = 400ms



Label Gone Timeout = 0.4 Seconds



Power-up Tone Control = Play Tone



Good Read Beep Frequency = Medium



Good Read When to Indicate = After Decode



Scale Zero Button and Scale Indicator LED =
Scale Zero Button active



Scale Sentry = Enable



Scale Sentry Mode = Weight Integration



Scale Sentry Beep = Enable



Scale = Enable



Scale Enforced Zero Return = Non Zero for 4 minutes



Scale Interface Type = RS-232 - SASI



Scale Baud Rate = 9600



Scale Interface Settings = N, 8, 1



Scale Interface Options = default



Remote Display = Enable



Interface Type = RS-232 Standard



RS-232 Baud Rate = 9600



RS-232 Number of Data Bits = 8



RS-232 Number of Stop Bits = 1



RS-232 Parity = None



RS-232 Hardware Control = Disable



RS-232 Software Flow Control = Disable



RS-232 Ignore Host Commands = Don't Ignore



RS-232 Indicate Transmission Failure = Enable



Global Suffix = CR